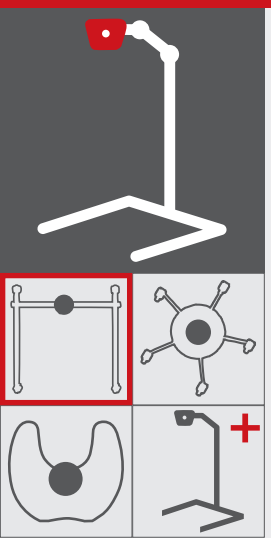

2022-07-01

00.5076~D

Floorstand

- 17.1083 **FS TeleFloat Light**
- 17.1073 **FS TeleFloat**

MOUNTING MADE EASY

Scan me

Sicherheitshinweise
Safety Instructions

Montage
Assembly Instructions

Handhabung
Handling

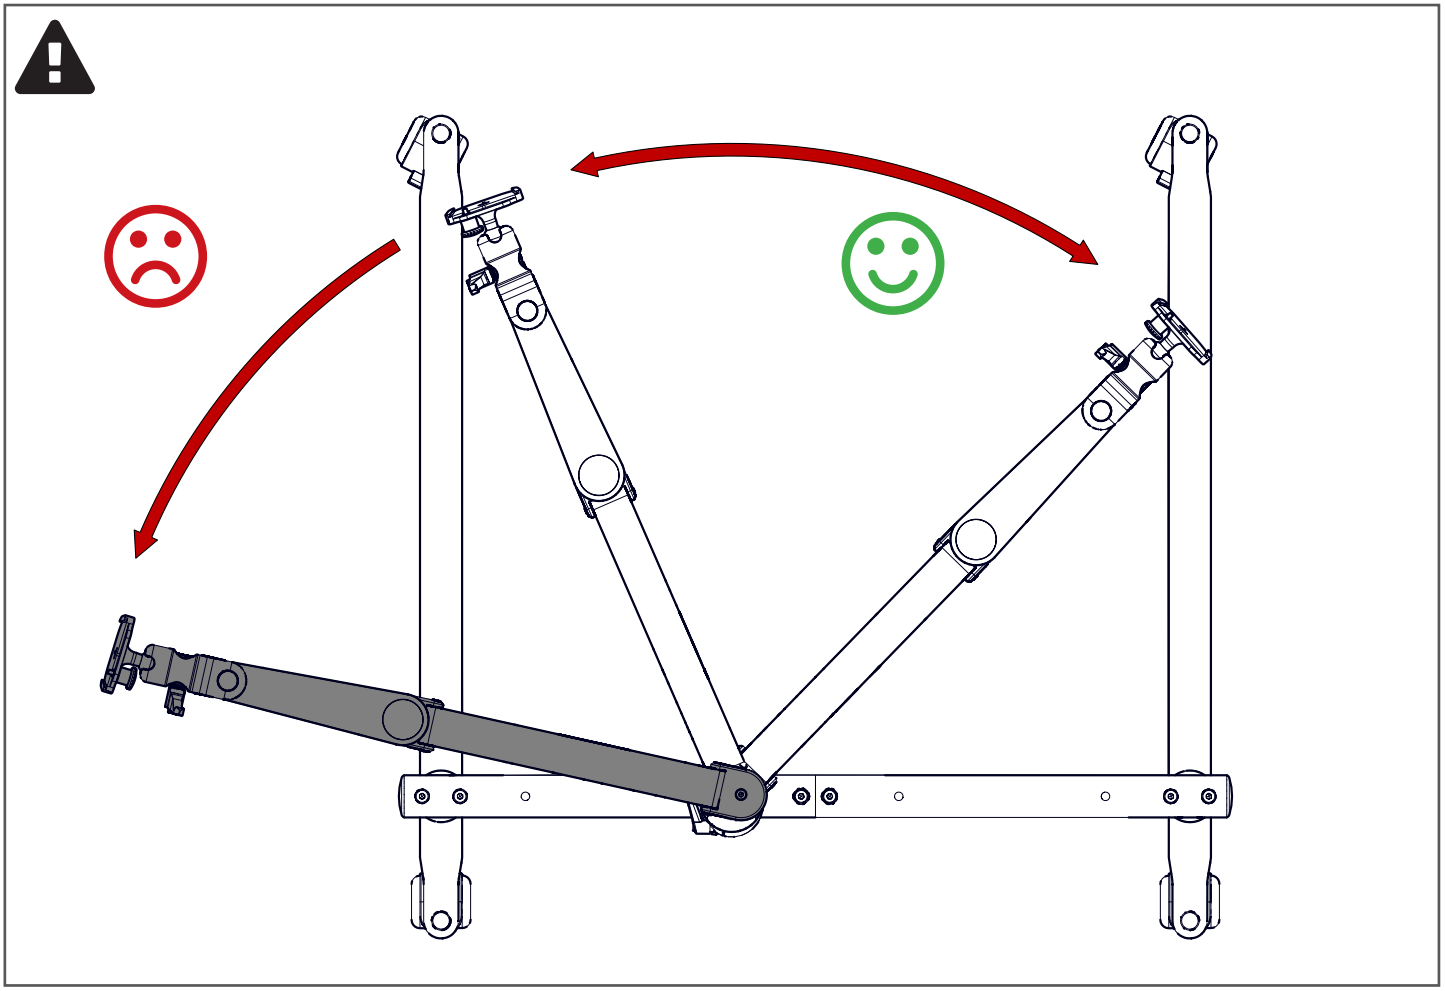

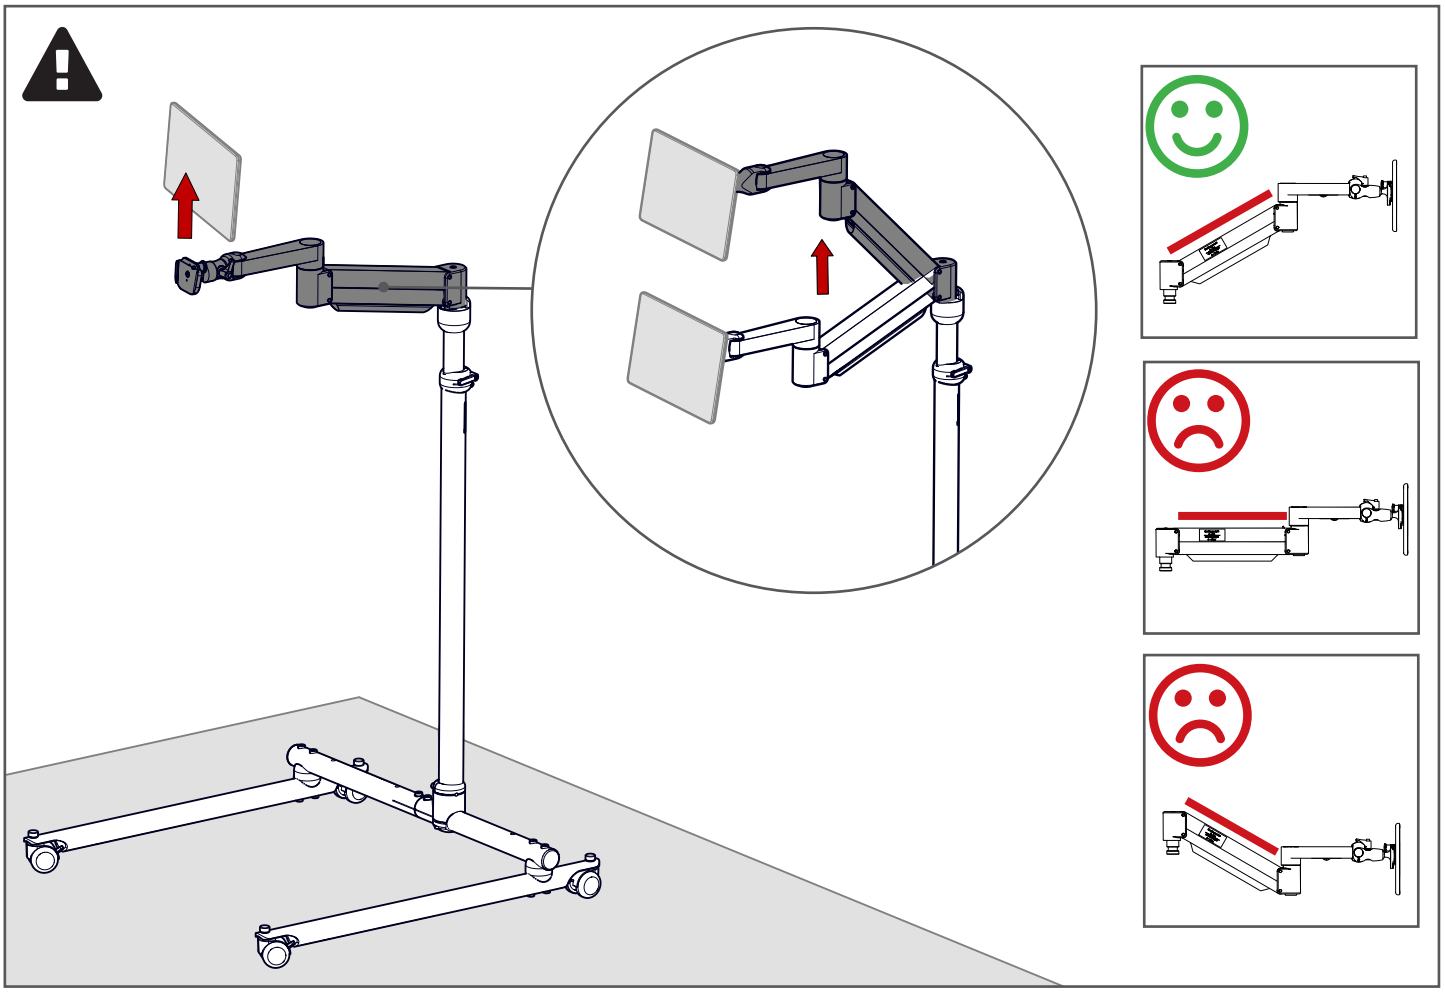

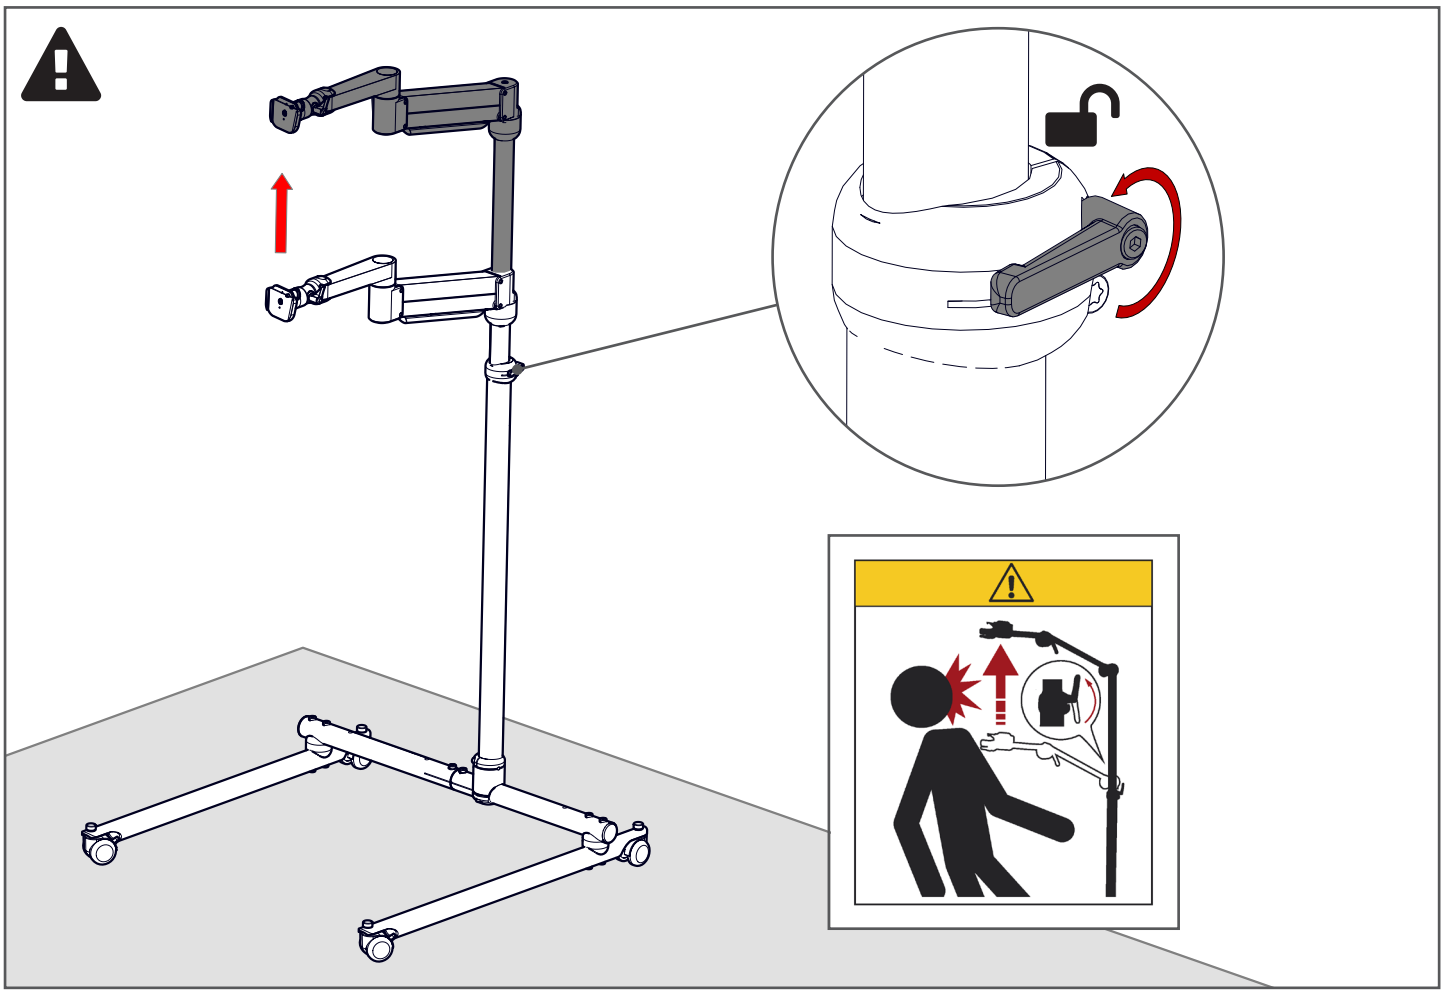

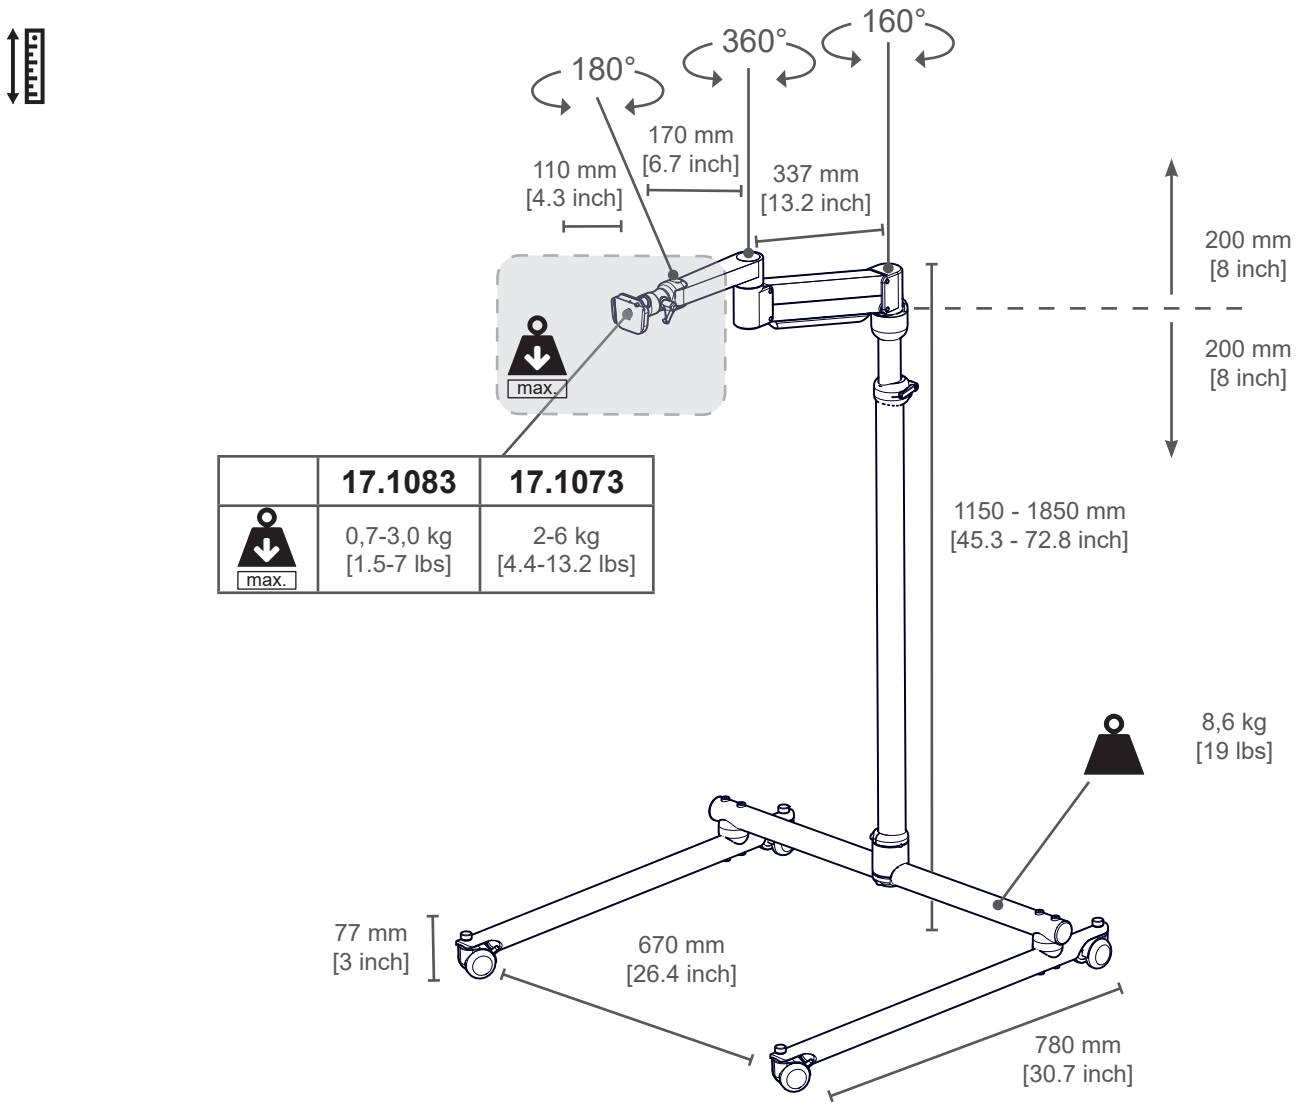

	17.1083	17.1073
max.	0,7-3,0 kg [1.5-7 lbs]	2-6 kg [4.4-13.2 lbs]

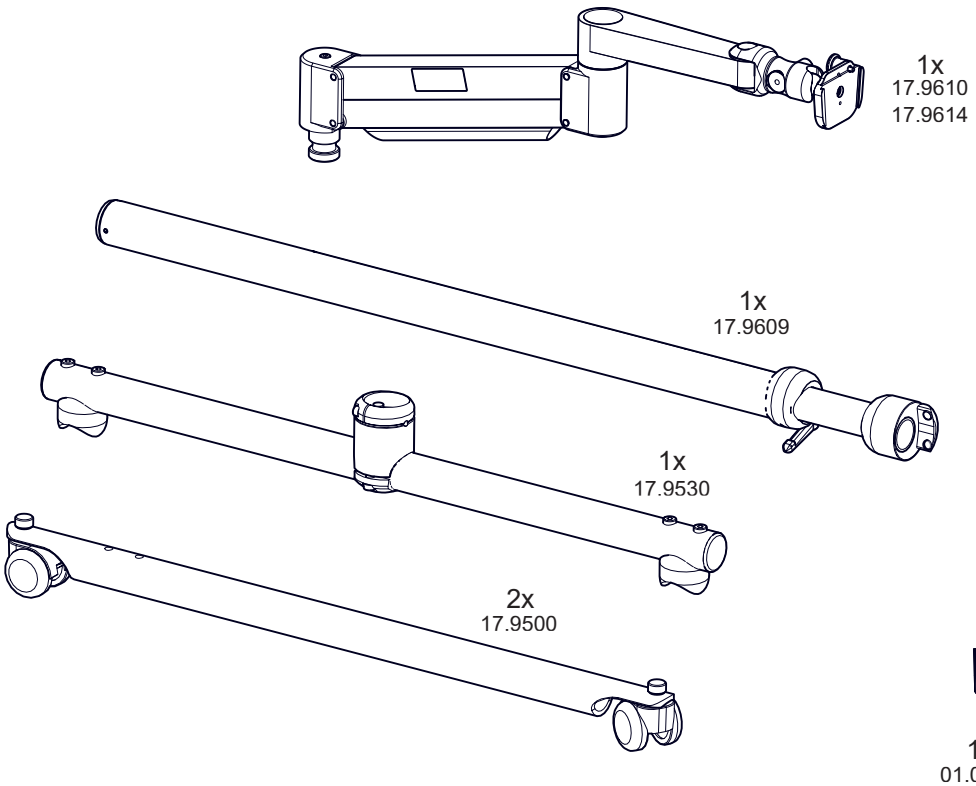

1

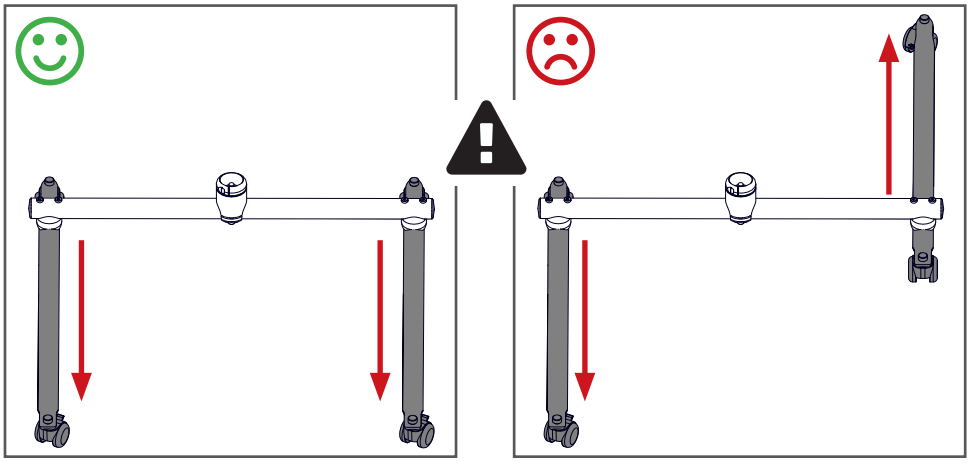

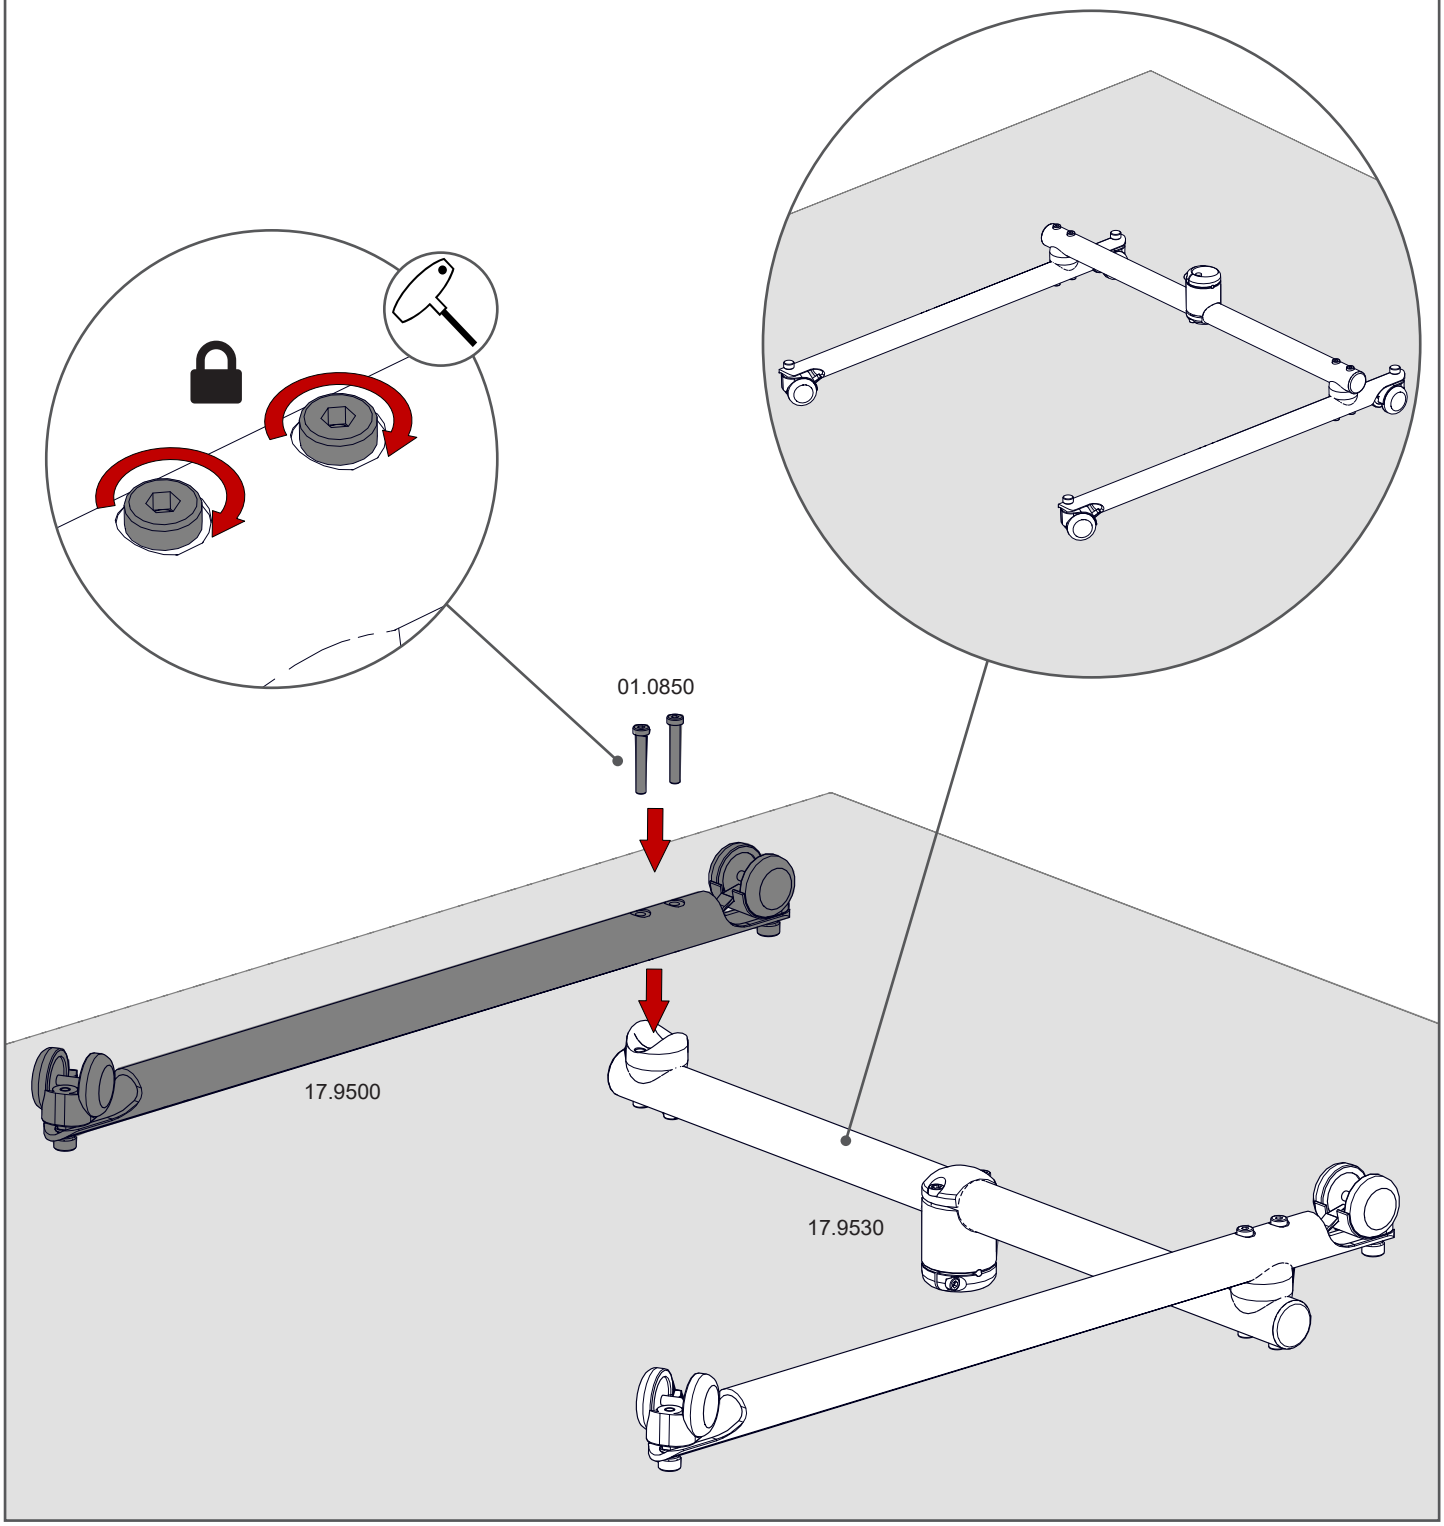

2

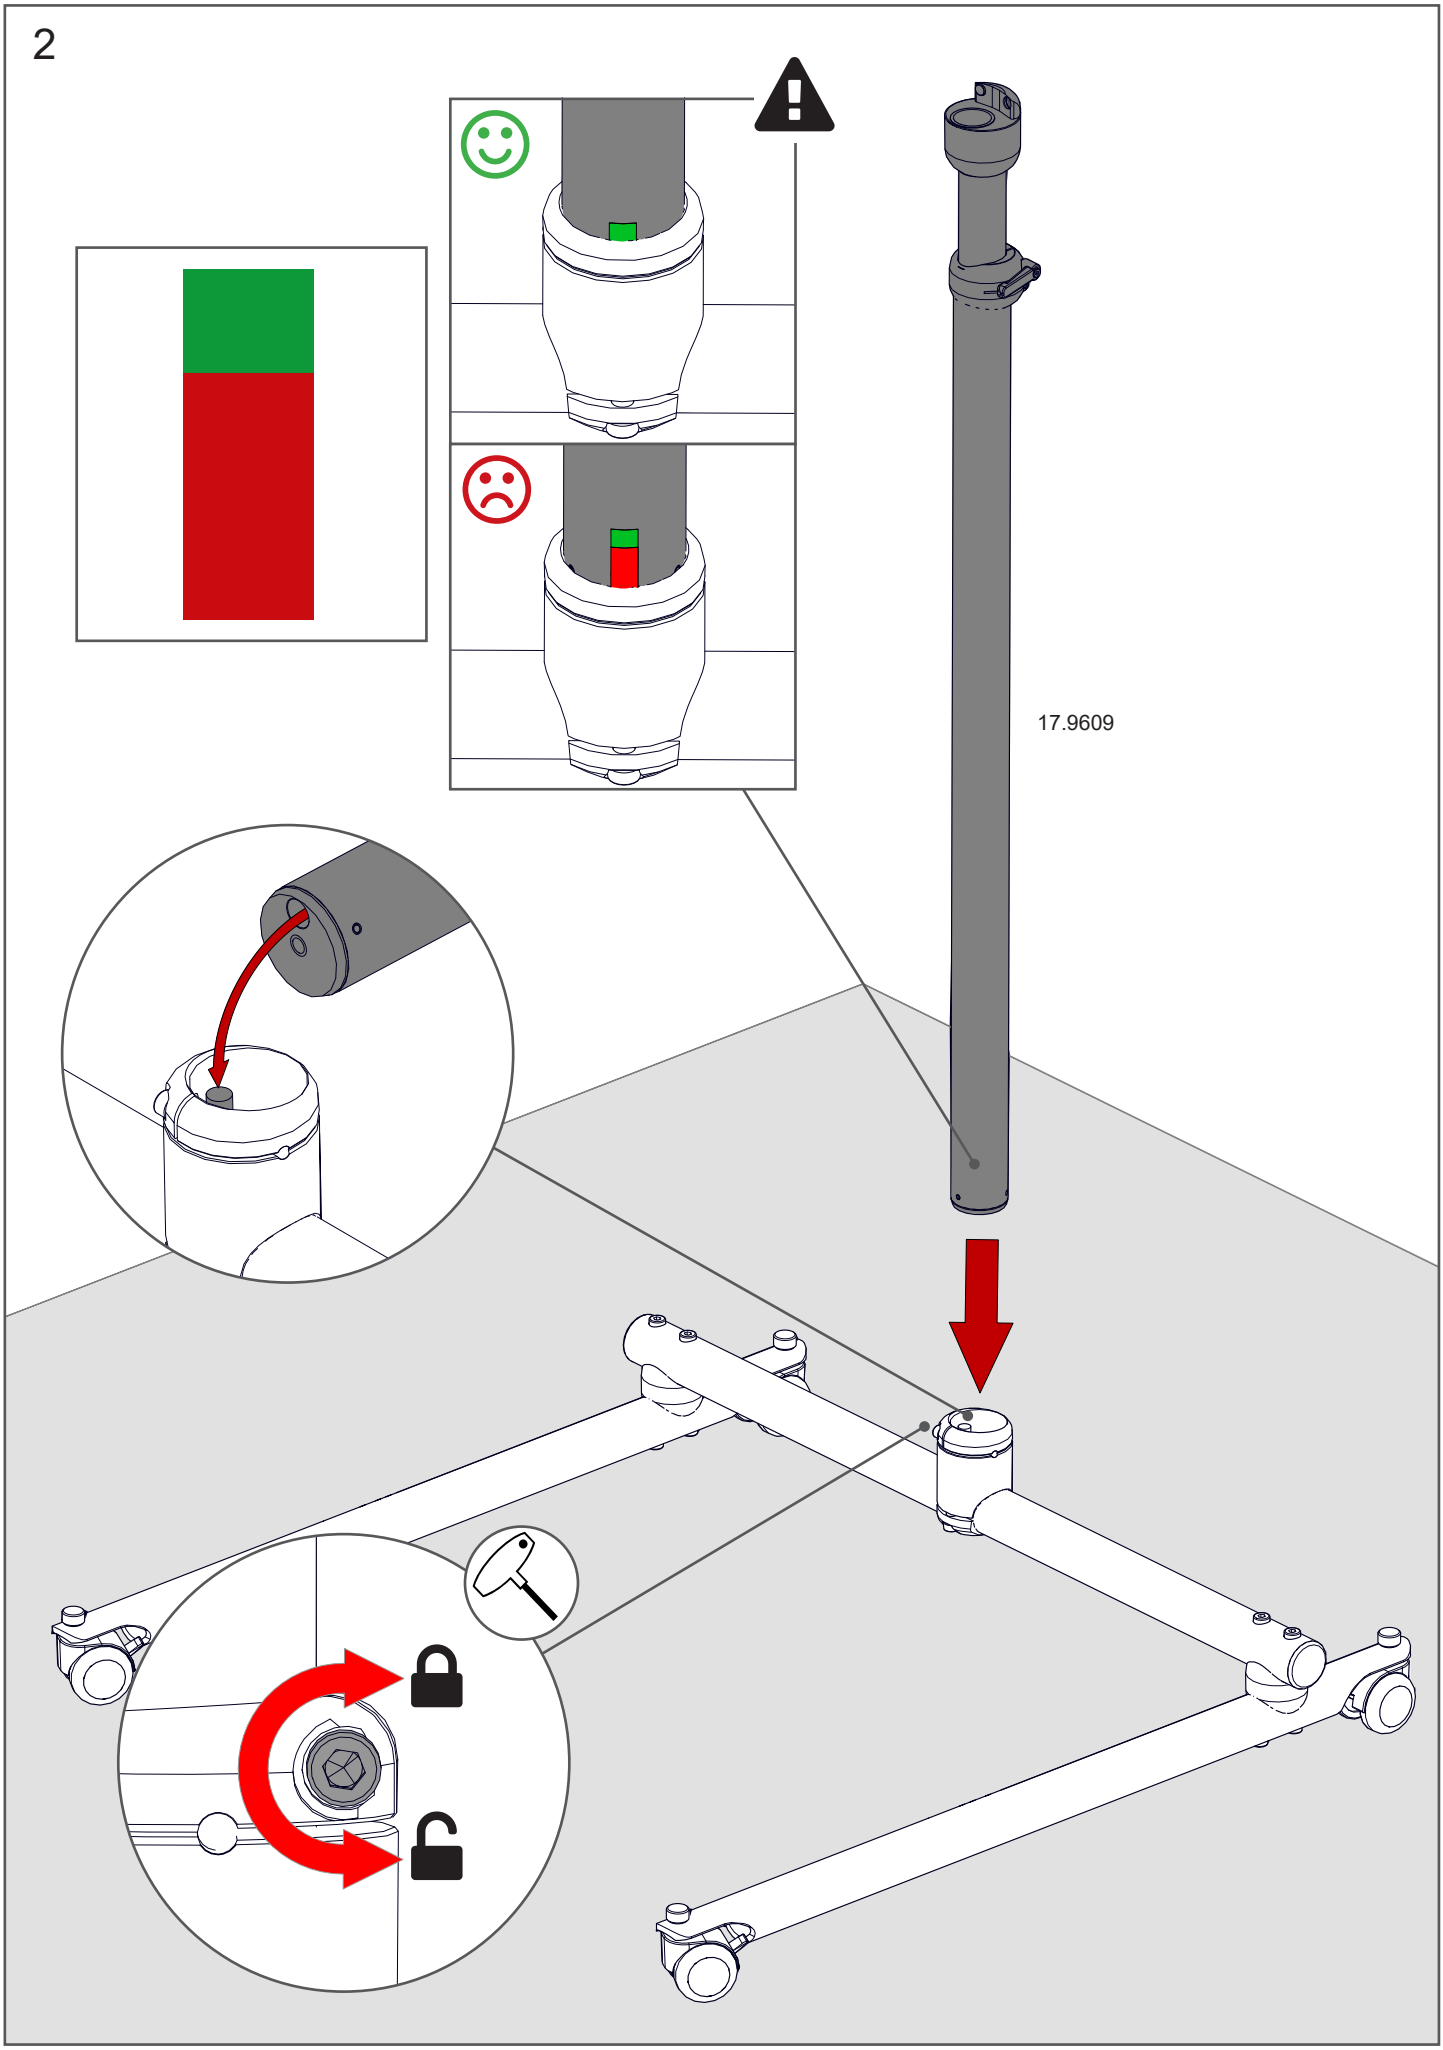

3

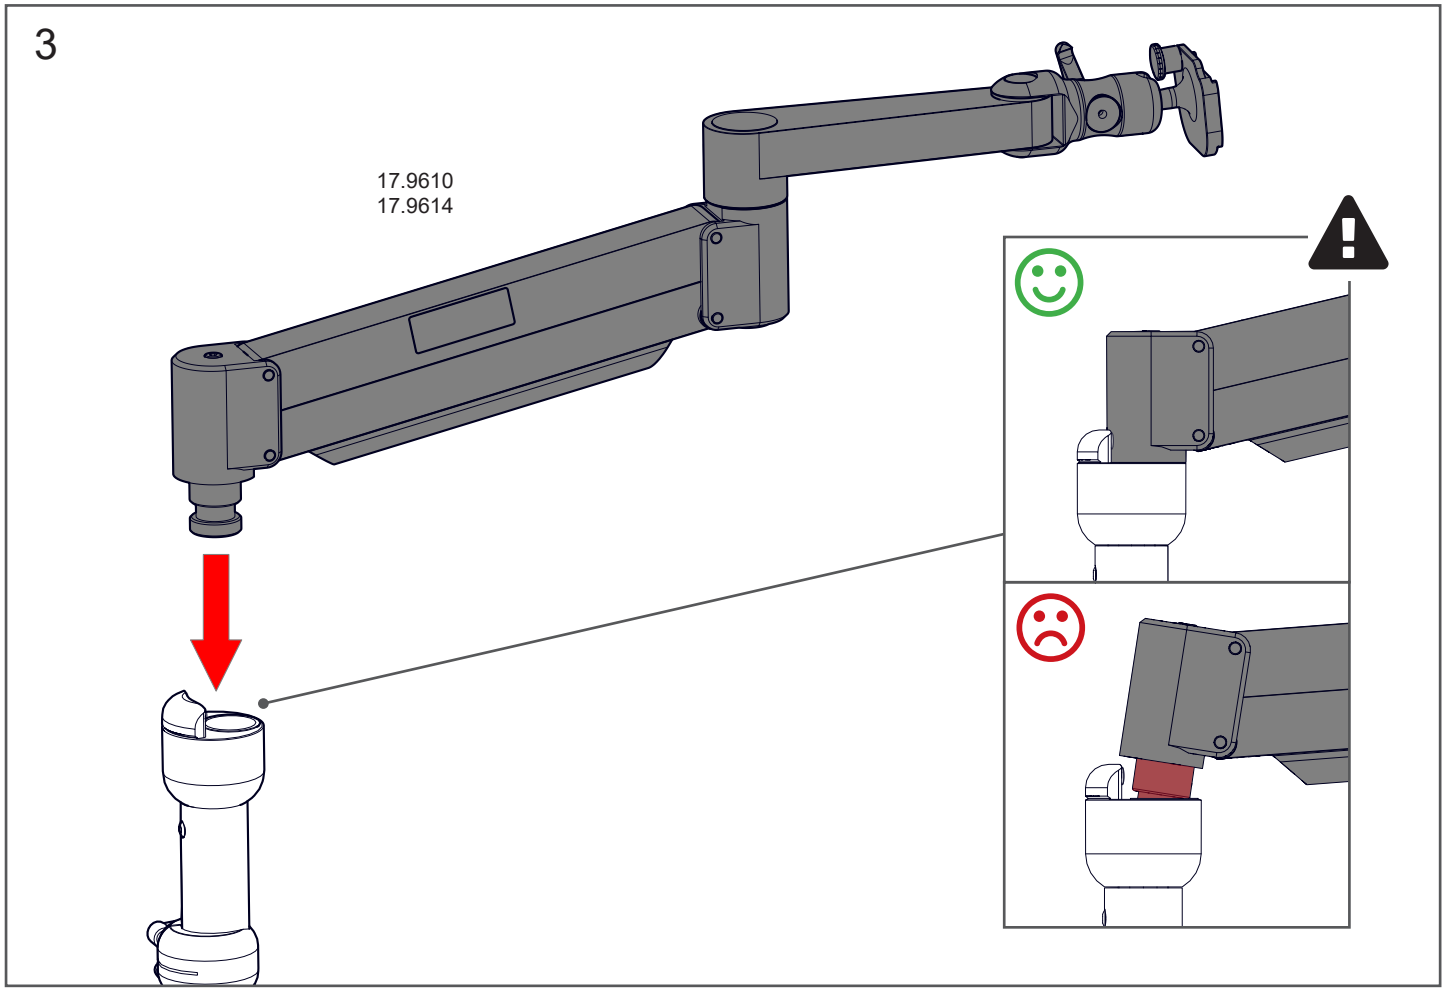

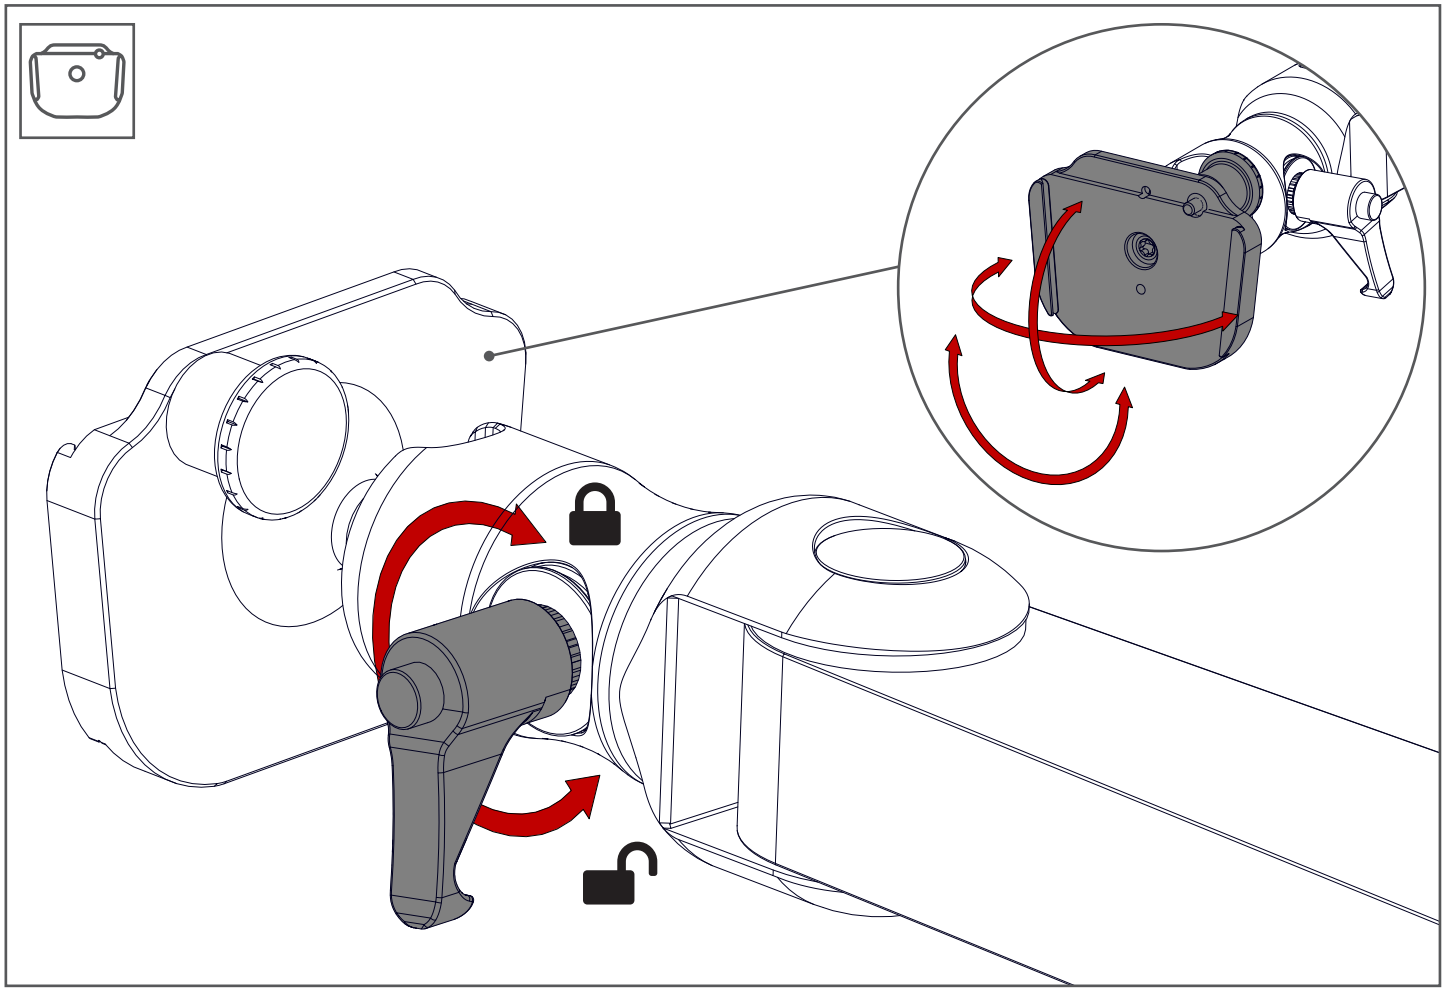

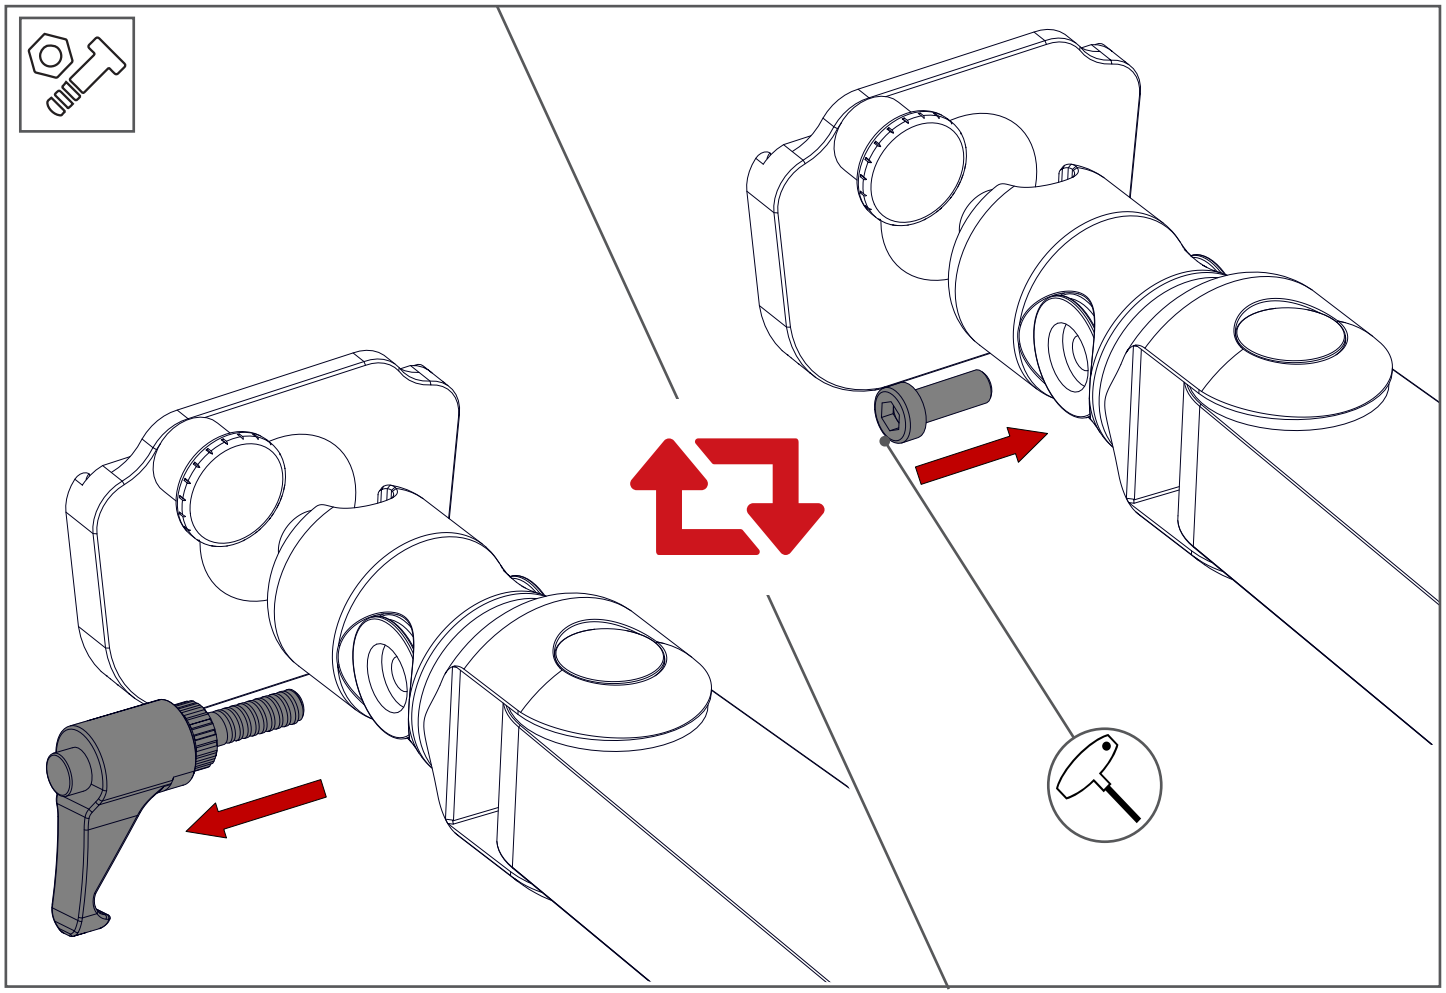

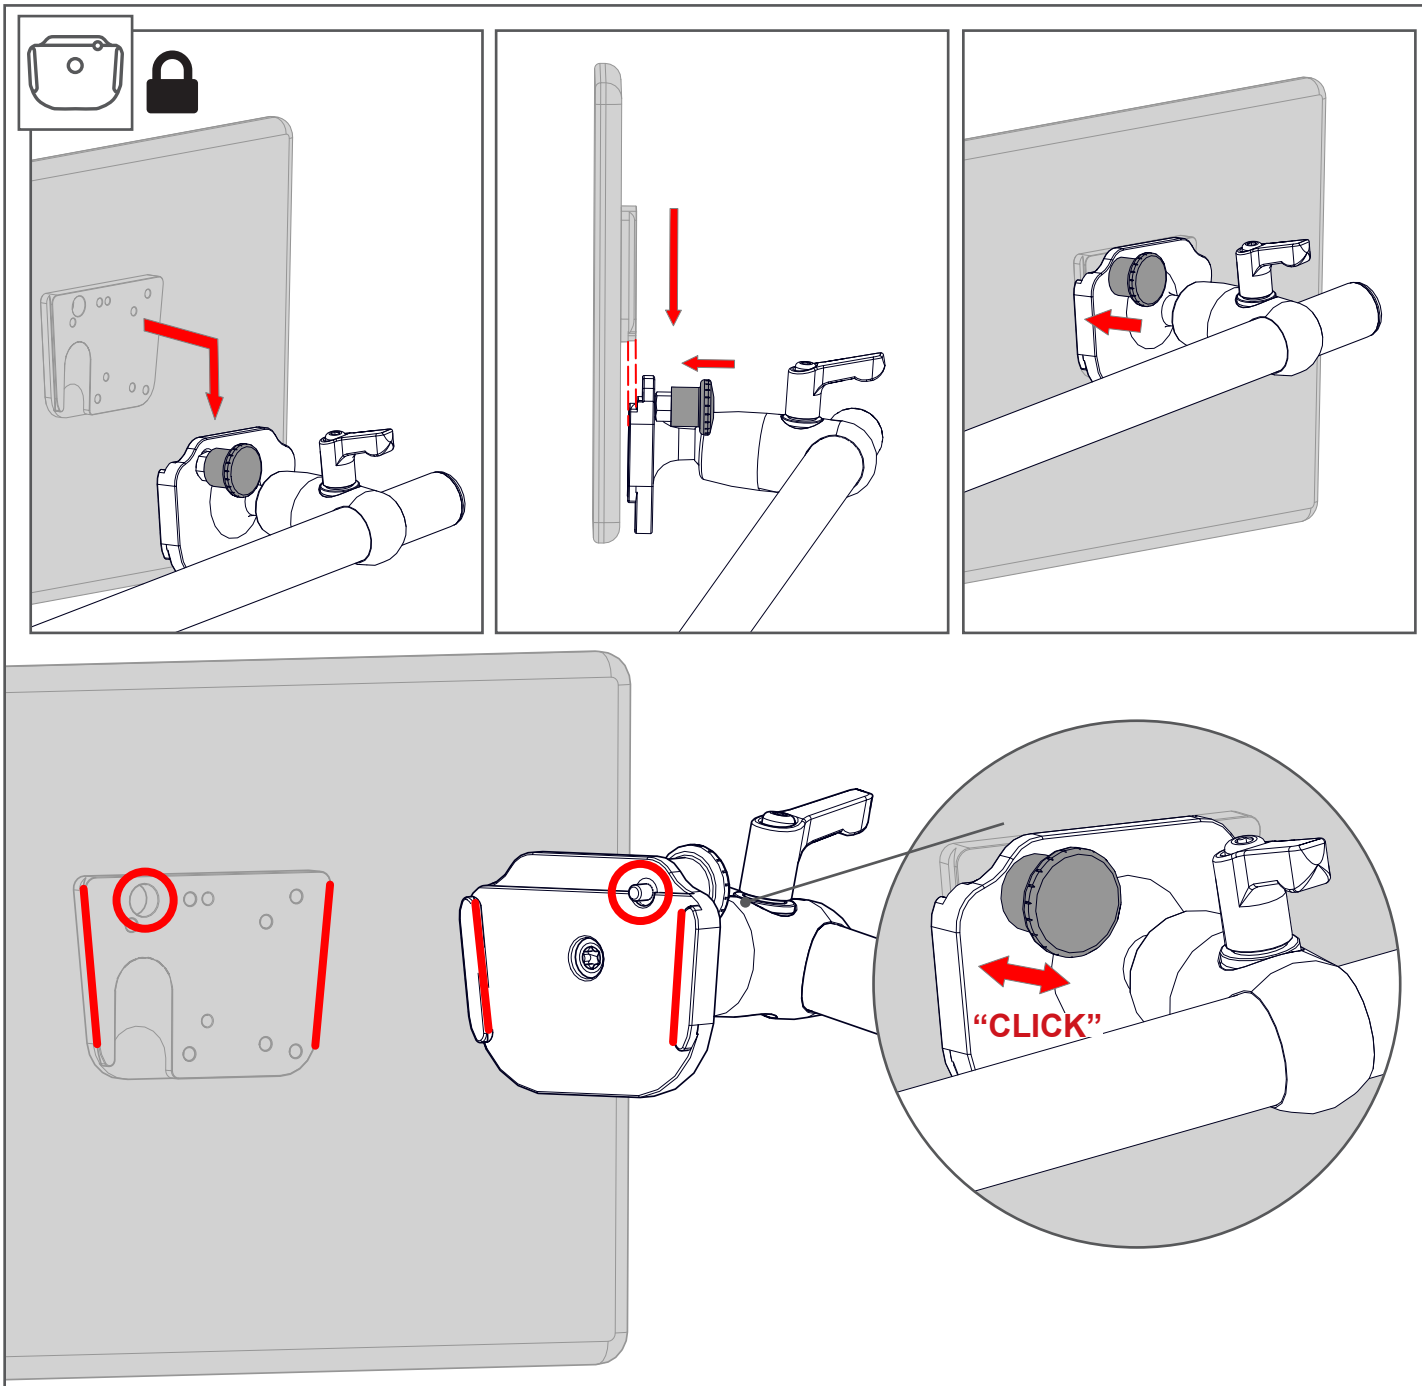
“CLICK”

EN

IMPORTANT!
- Device must be on arm
- Arm must be in mount

Bring the arm to a position approximately horizontal prior to turning the strength adjustment screw.

If the arm **drifts upward**, turn the adjustment screw clockwise.

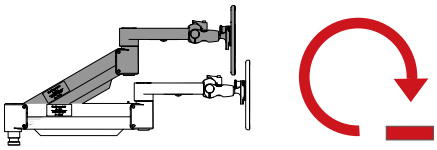

If the arm **drifts downward**, turn the adjustment screw counter-clockwise.

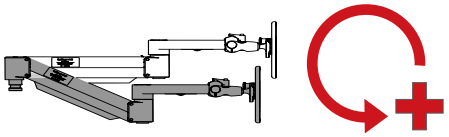

Depending on the weight of your device, **you may have to make 15-20 turns.**

DE

WICHTIG!
- Gerät muss montiert sein
- Arm muss in Halterung sein

Vor dem justieren der Einstellschraube drücken Sie den **Arm nach unten bis er ungefähr parallel zur Grundfläche ist.**

Wenn der Arm **nach oben driftet**, drehen Sie die Einstellschraube im Uhrzeigersinn.

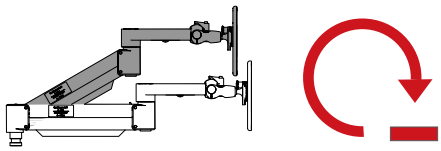

Wenn der Arm **nach unten driftet**, drehen Sie die Einstellschraube gegen den Uhrzeigersinn.

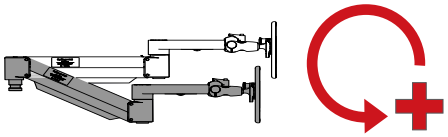

Abhängig vom Gewicht Ihres Gerätes, müssen Sie möglicherweise **15-20 Umdrehungen durchführen.**

1

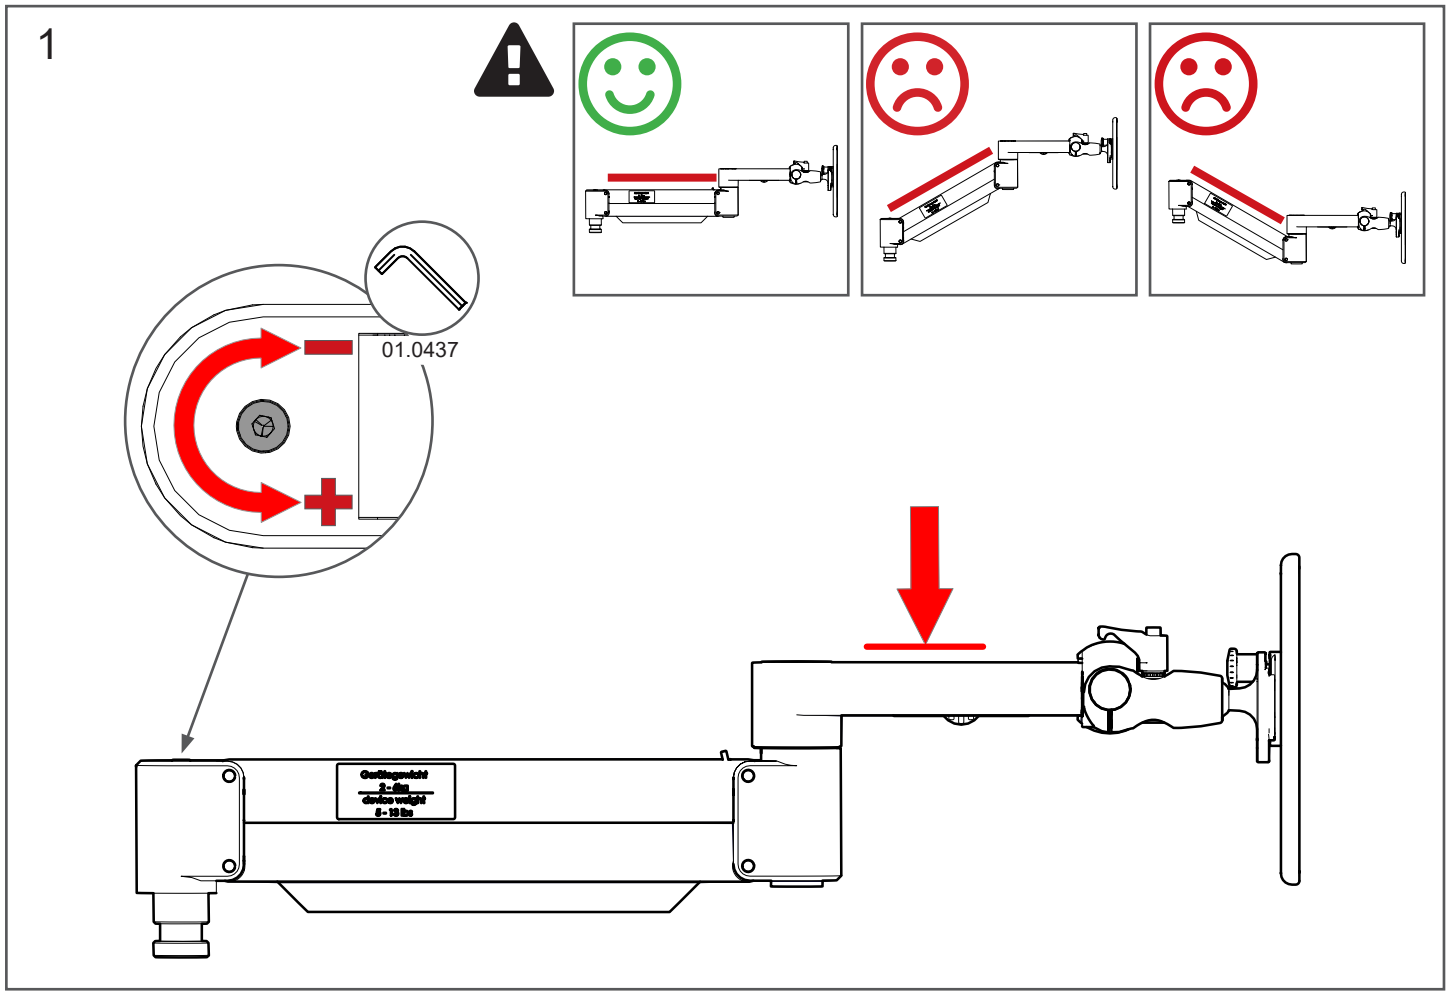

EN

In some instances, further counterbalance adjustments are needed to allow the arm's instant height adjustment function to work properly.

If your arm is not staying in position after performing step1, follow these steps:

With arm in raised position, tighten set screw **(A)**

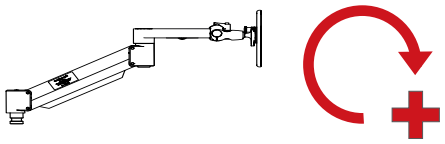

With arm in horizontal position, tighten set screw **(B)**

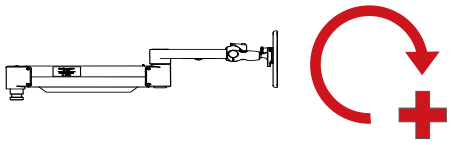

Do not overtighten the screws.

DE

In einigen Fällen sind weitere Gegengewichtseinstellungen notwendig, damit die korrekte Höheneinstellung des Arms möglich ist.

Wenn dein Arm nach der ersten Variante nicht in der gewünschten Position bleibt, folge diesen Schritten:

Mit erhobenem Arm, Stellschraube anziehen **(A)**

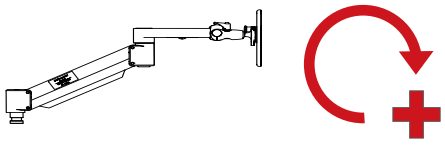

Mit Arm in horizontaler Position,Stellschraube anziehen **(B)**

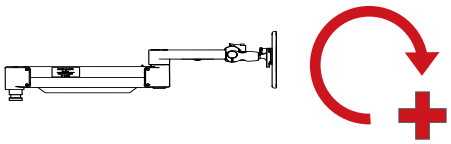

Schrauben nicht zu fest anziehen.

2

17.1073 - FS TeleFloat

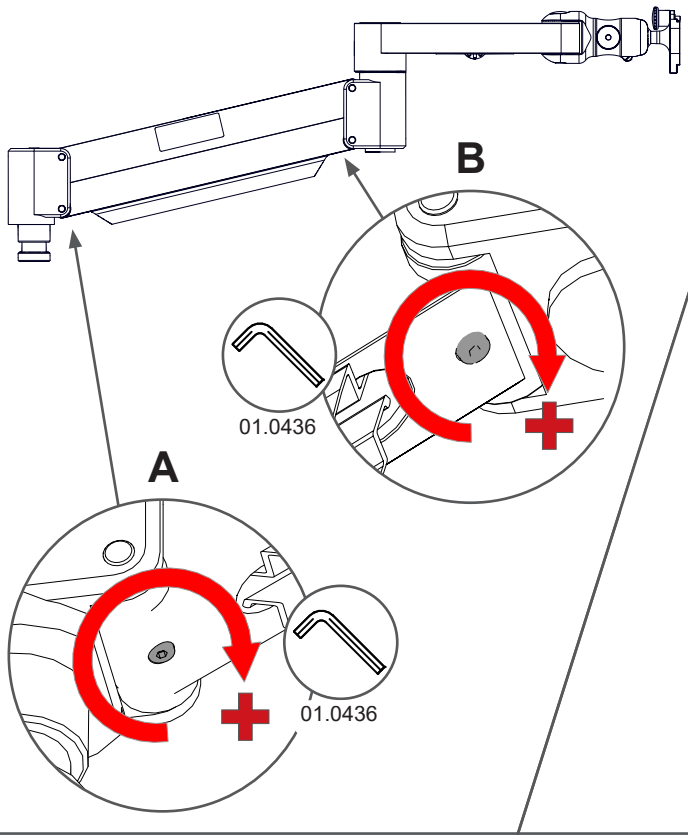

17.1083 - FS TeleFloat Light

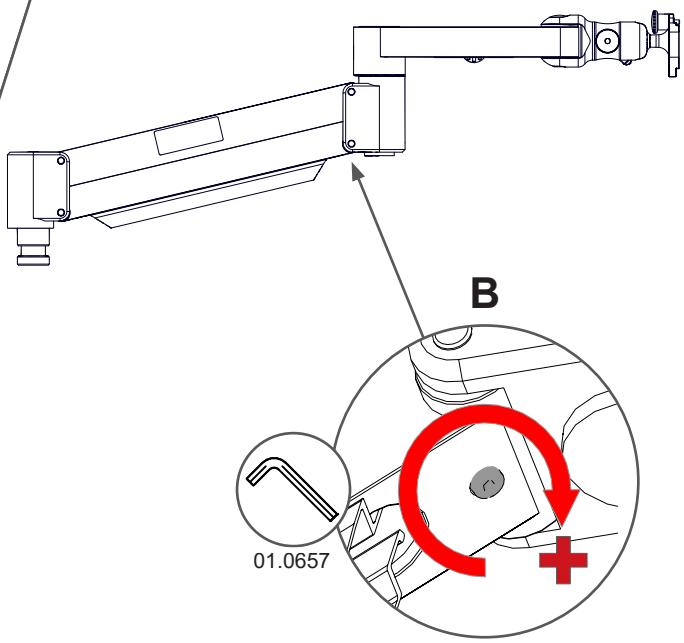

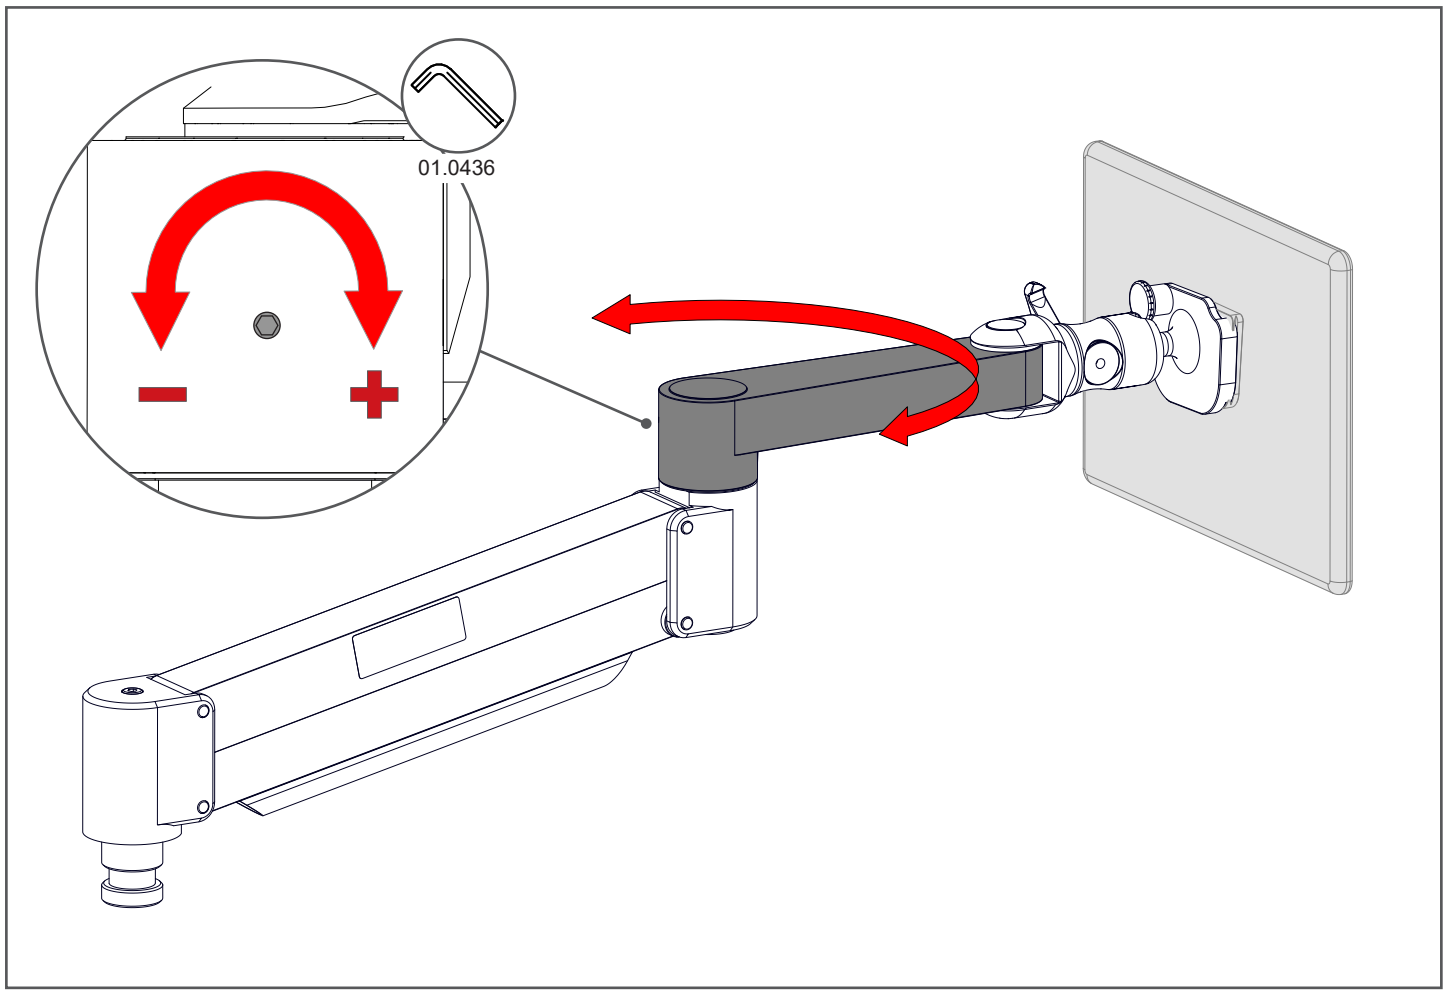
01.0436

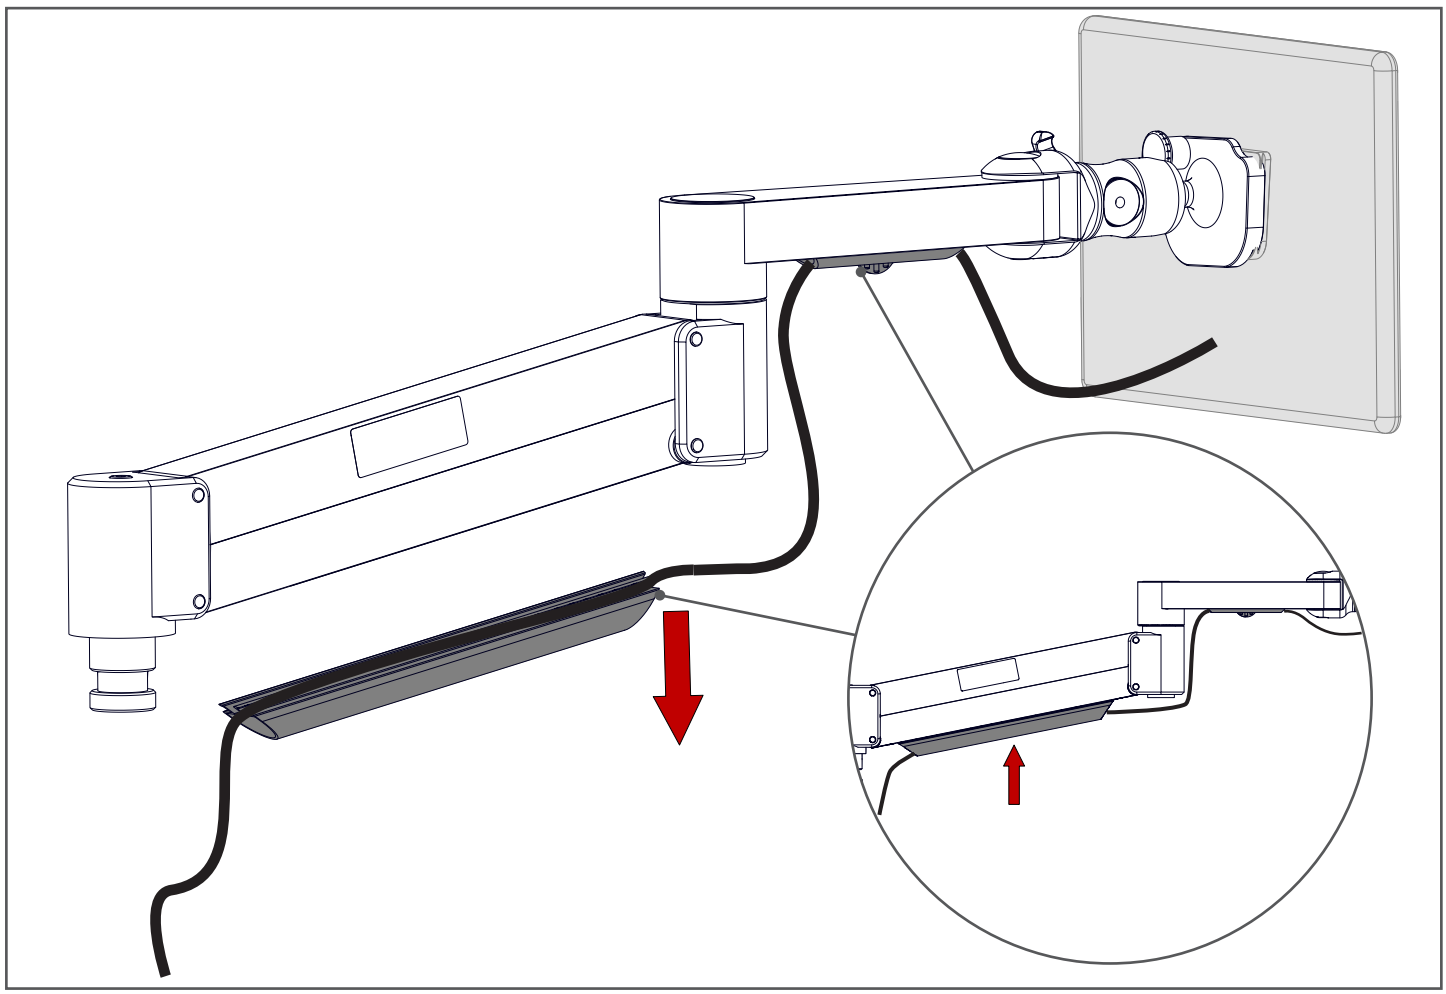

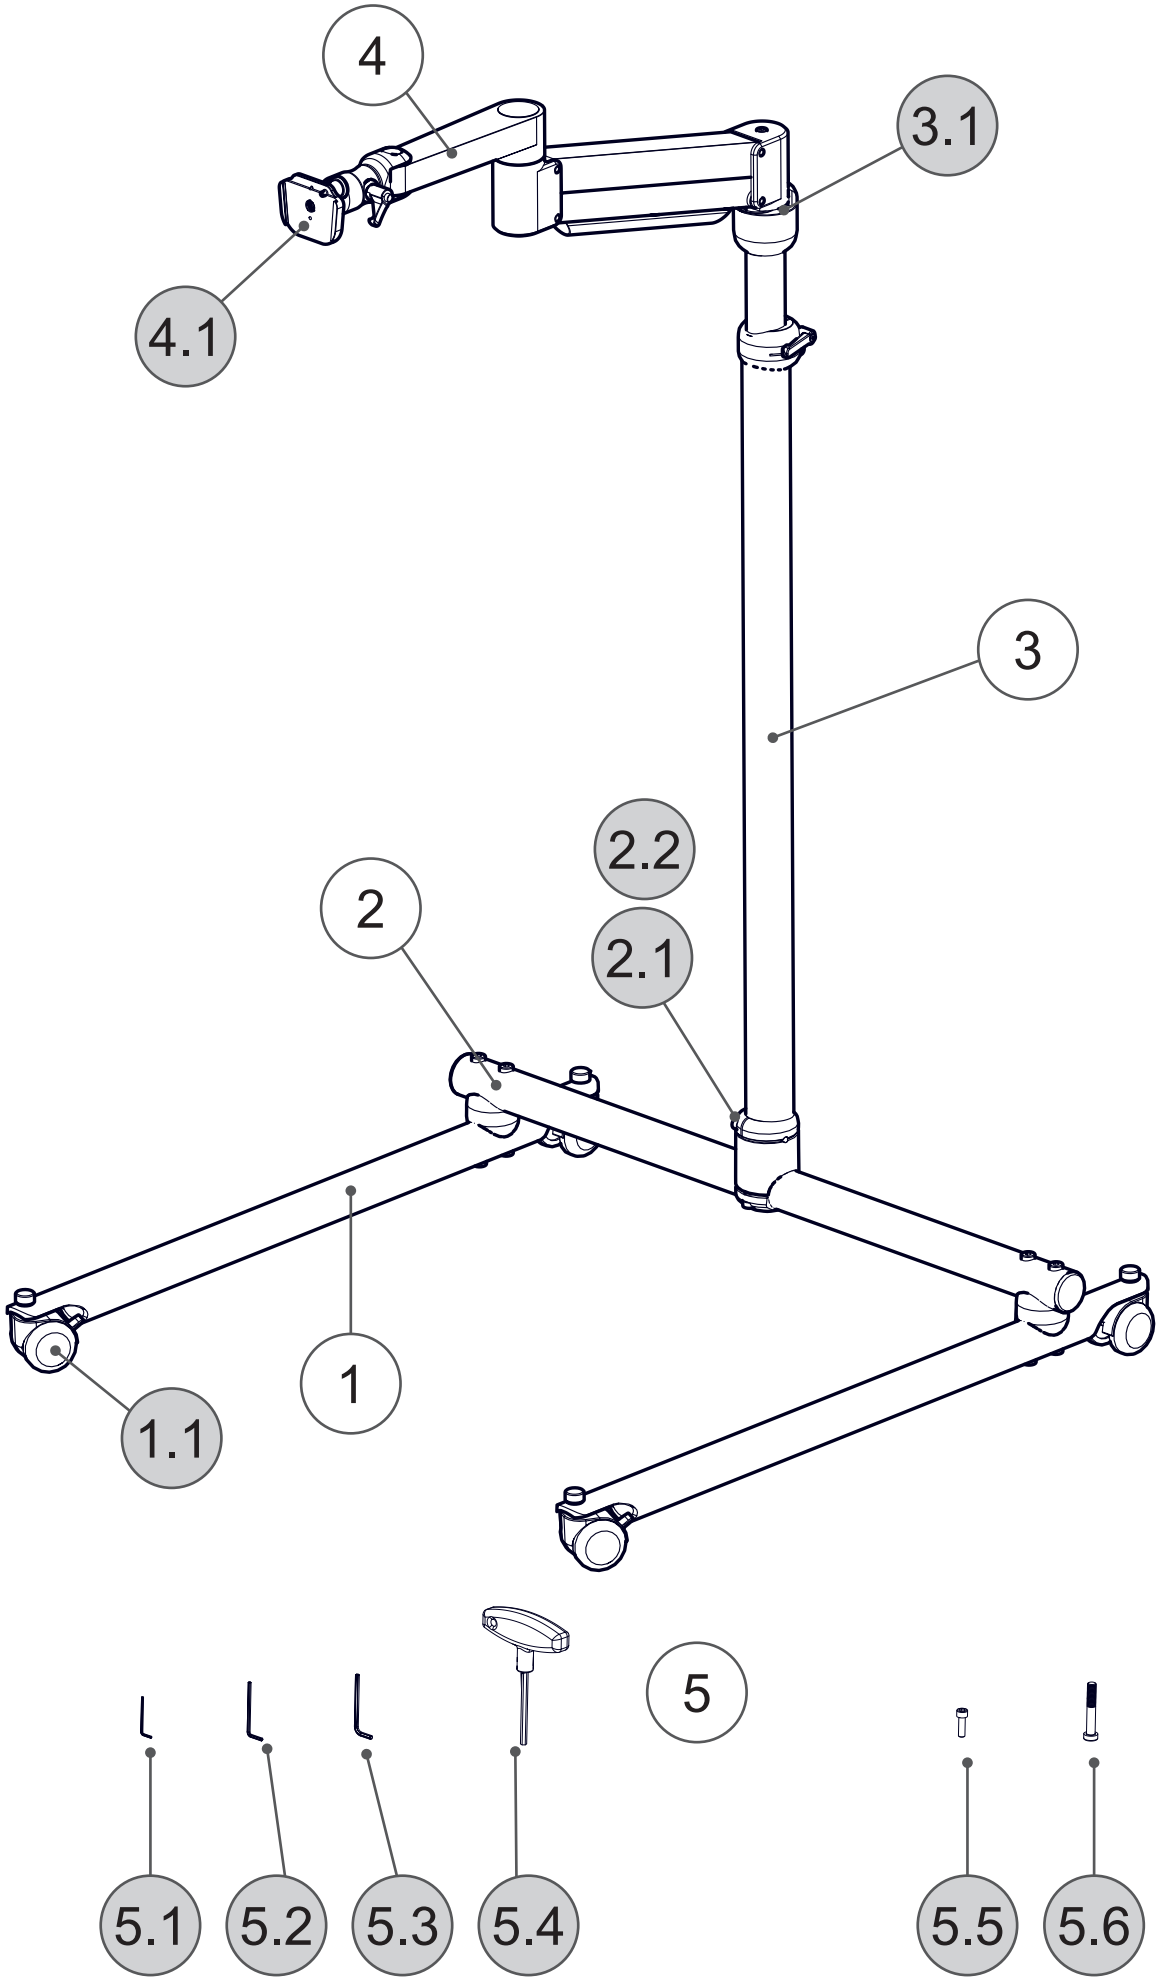
4
3.1
4.1
3
2.2
2
2.1
1
1.1
5
5.1
5.2
5.3
5.4
5.5
5.6

Pos.	No.	Bezeichnung	Description
1	17.9500	FS Bein	FS Leg
1.1	17.9540	FS Classic Doppelrolle	FS Classic Swivel Caster
2	17.9530	FS Traverse Eco 78	FS Traverse Eco 78
2.1	01.0620	Zylinderschraube M6x20	Cylinder head bolt M6x20
2.2	01.0393	Scheibe Ø6,4 mm	Washer Ø6.4 mm
3	17.9609	FS Säule TeleFloat	FS Column TeleFloat
3.1	01.0109	Gleitlager FloatArm	Sleeve Bearing FloatArm
4*	17.9614	FS Arm Float Light	FS Arm Float Light
4**	17.9610	FS Arm Float	FS Arm Float
4.1	16.1070	UGA Float QuickShift	UDS Float QuickShift
5		Montagekit	Mounting kit
5.1	01.0436	Innensechskantschlüssel 3/32”	Allen wrench 3/32”
5.2	01.0657	Innensechskantschlüssel 1/8”	Allen wrench 1/8”
5.3	01.0437	Innensechskantschlüssel 7/32”	Allen wrench 7/32”
5.4	01.0027	T-Griff	T-Handle
5.5	01.0620	Zylinderschraube M6x20	Cylinder head bolt M6x20
5.6	01.0850	Zylinderschraube M8x50	Cylinder head bolt M8x50

* **17.1083** FS TeleFloat Light
** **17.1073** FS TeleFloat

Rehadapt Engineering
GmbH & Co. KG

Heinrich-Hertz-Str. 104
34123 Kassel, Germany

Tel.: +49 561 220 717 0
Fax: +49 561 220 717 99

officeteam@rehadapt.com
https://rehadapt.com

Rehadapt
North America

40 Oser Ave, Suite 40-01
Hauppauge, NY 11788

Tel.: 1 (888) 635-6962
Fax: 1 (888) 635-6962

officeteam.na@rehadapt.com
https://rehadapt.com